



PIVOT HINGE USER MANUAL

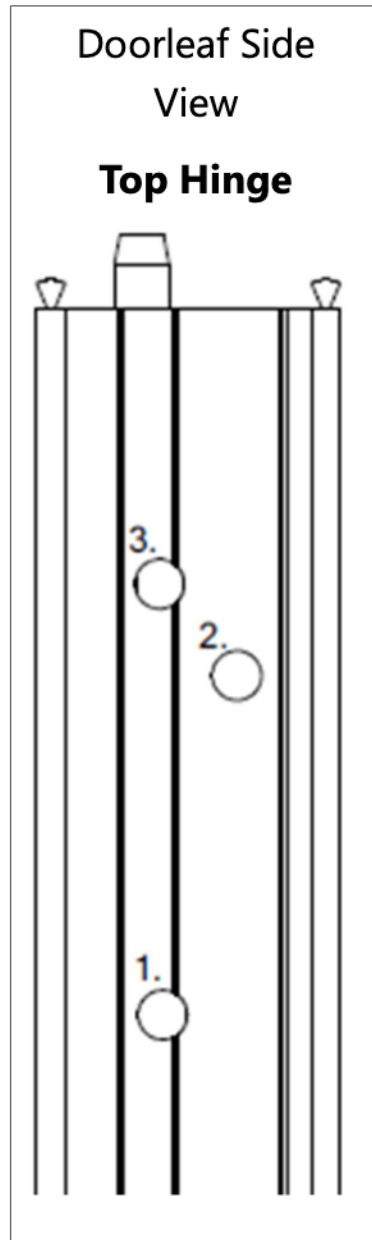

Instructions below are applied to both hinges

Screws nr1 – Pin Adjustment

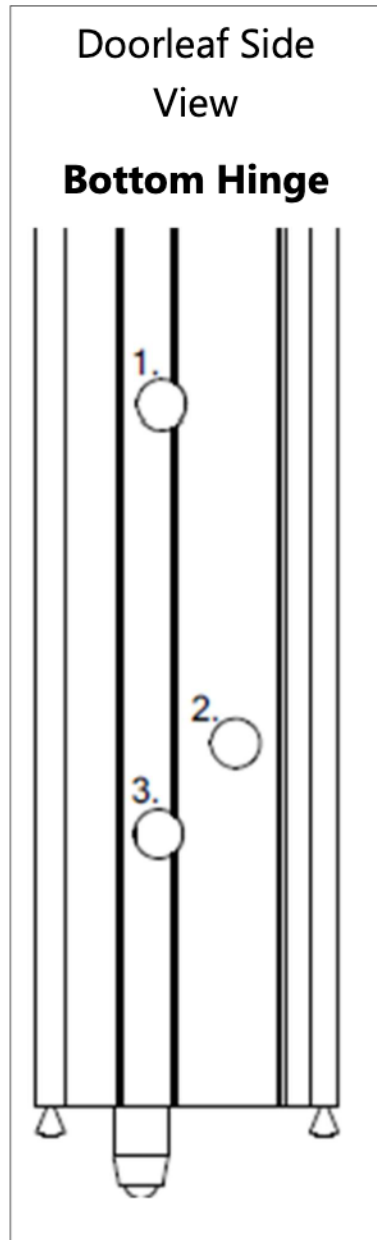

Clockwise

Pin Extrusion



Counter-clockwise

Pin Intrusion

Screws nr2 Doorleaf Displacement



Clockwise

Displacement towards the lock



Counter-clockwise

Displacement away from the lock

Screws nr3 Pin Block



Clockwise

Pin block



Counter-clockwise

Pin Unblock



Screws nr3 must always be unblocked (loose) when adjusting the hinge, and blocked as a final step of installation!